

JOHN DEERE - RC DUAL PRODUCT *AgXcel Quick Start Setup*



PLEASE NOTE: YOUR SETUP MAY VARY!


The screenshots in this guide represent a typical AgXcel Liquid Fertilizer System setup. See your equipment operator's manual for safety information and additional setup and operating information. Please ensure you have the latest firmware installed!

MENU STRUCTURE FOR LIQUID RATE CONTROLLER


Setup: Implement



Press **MENU** to find your Rate Controller 3

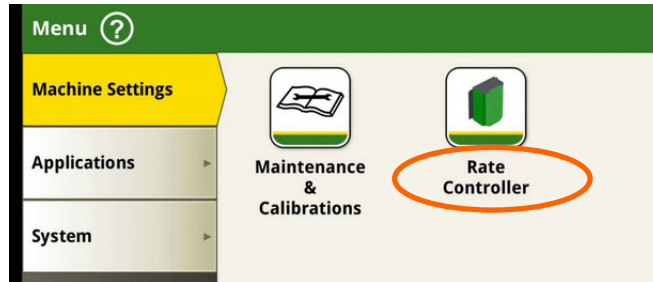

Under **Machine Settings** press **Rate Controller** to start your profile setup

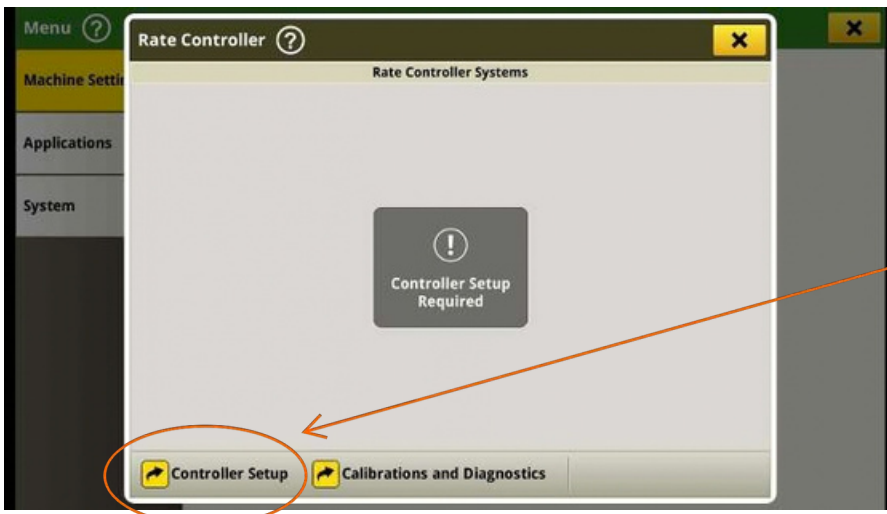


Press **Controller Setup** on the bottom left of the **Rate Controller** tab

Then **add a name** for the Profile you are about to create and choose the **Dual Solution** box for a dual product application. Once done, press **OK**.






Setup and Configuration

This is the Profile that you have created. From here, you can change the settings of the Profile.

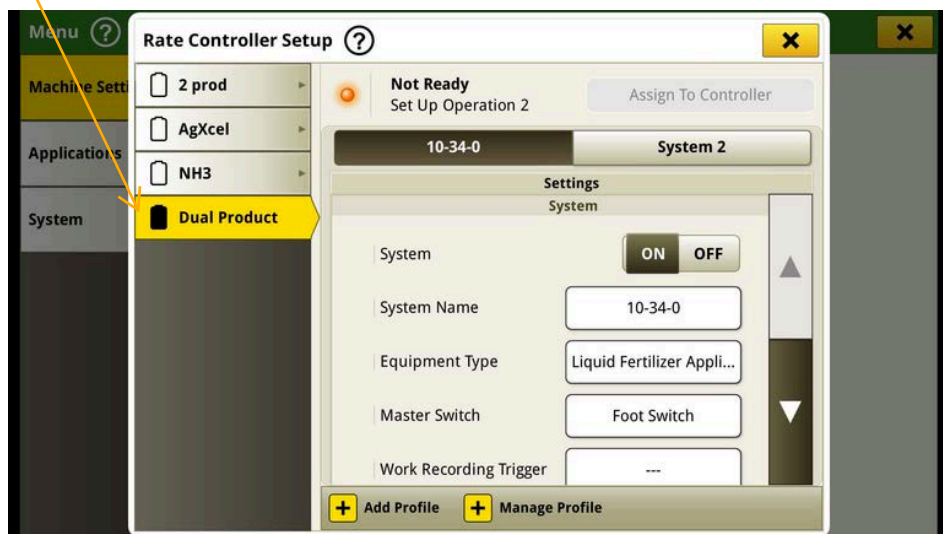


- **System:** You can turn this off when you are not wanting to apply liquid on a certain field and not have to delete the profile.
- **System Name:** Enter the name of the system (such as product name or application type).

- **Equipment Type:** Select Liquid Fertilizer Applicator.
- **Master Switch:** Select if you are using a soft Virtual switch, a Switch Box, or a Foot Switch as your system master switch.
- **Work Recording Trigger:** If you are using an AgXcel provided lift switch, then select Height Switch. Or else you can select any other option you prefer as a height switch if you choose to use a height switch.

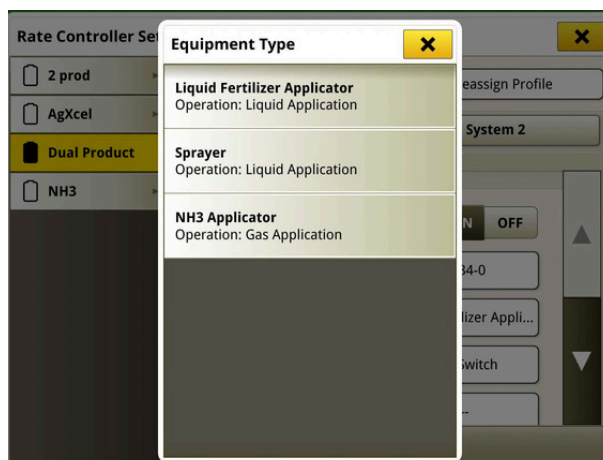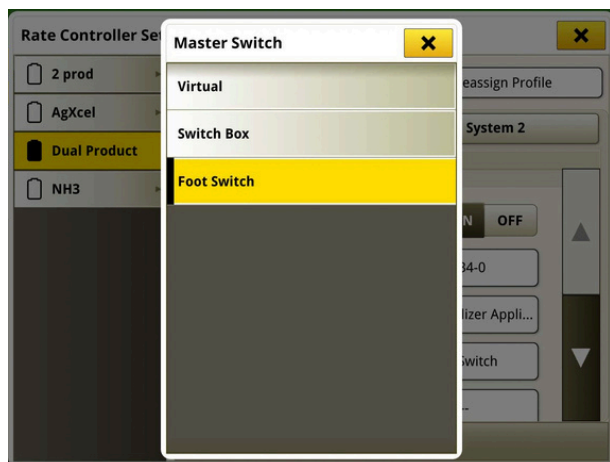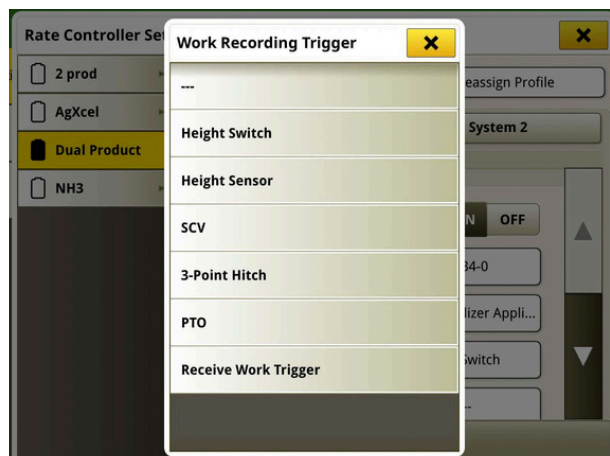


Setup and Configuration

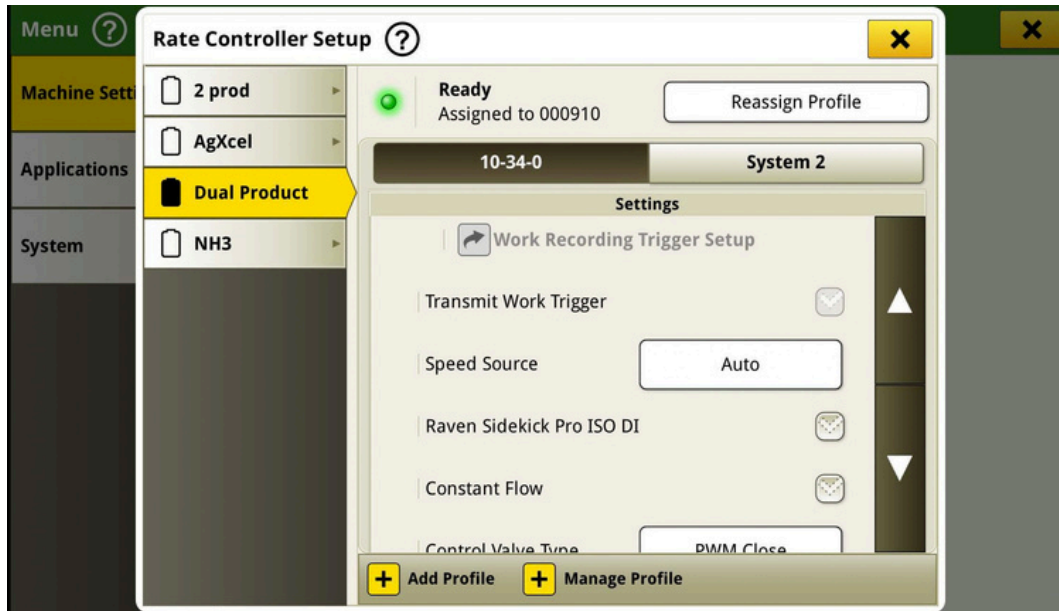

- **Transmit Work Trigger:** This can be selected when using multiple Rate Controller 3 units to share the work recording trigger. Select this when using multiple Rate Controller 3 units with one implement switch.
- **Speed Source:** Selecting Auto will first prioritize GPS, then Radar, then Wheel Speed. Radar Speed only prioritizes Radar first, then Wheel Speed.

- **Constant Flow:** If a 3 way valve were to be installed and the section valves were to shut off, then the 3 way valve would open to return flow back to the tank. Most applications do not check this box.
- **Control Valve Calibration:** All AgXcel pump systems use a PWM driver, so you will select PWM Close.
- **Pump Speed Sensor:** Do not enable. AgXcel GX2 or GX5 pumps do not use an RPM sensor when a flowmeter is in use. AgXcel GX5 RPM sensor motors read at 15 Pulses Per Revolution.

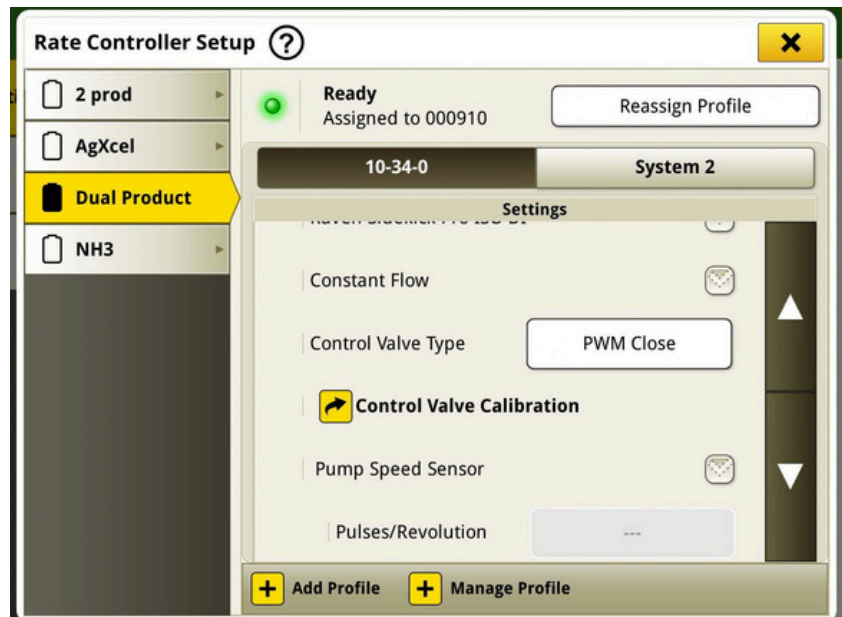

Setup and Configuration

Control Valve Type

 **Control Valve Calibration**

Once you have selected your Control Valve Type, **Press the Control Valve Calibration** to enter the calibration numbers.

Menu ?
Machine Settings
Applications
System

Control Valve Calibration ?

Valve Speed		Overshoot Reduction	
<input type="text" value="800"/>		<input type="text" value="2"/>	
Deadband		Frequency	
<input type="text" value="2%"/>		<input type="text" value="100 Hz"/>	
Startup Duty Cycle	Minimum Duty Cycle	Maximum Duty Cycle	
<input type="text" value="10 %"/>	<input type="text" value="0%"/>	<input type="text" value="100%"/>	

Valve Speed (adjust as needed)

GX2: 800
GX5 Diaphragm: 100
GX5 Centrifugal: 100

Deadband 2%

Overshoot Reduction (adjust as needed)

GX2: 2
GX5 Diaphragm: 2
GX5 Centrifugal: 2

Frequency

GX2: 100
GX5 Diaphragm: 100
GX5 Centrifugal: 122

Startup Duty Cycle (adjust as needed)

GX2: 10%
GX5 Diaphragm: 20%
GX5 Centrifugal: 20%

Minimum Duty Cycle (adjust as needed)

GX2: 0%
GX5 Diaphragm: 10%
GX5 Centrifugal: 10%

Maximum Duty Cycle

GX2: 100%
GX5 Diaphragm: 100%
GX5 Centrifugal: 100%

Setup and Configuration

Valve Speed

Valve Speed: Affects how quickly the PWM valve moves in response to the difference between the actual flow rate and the target flow rate. The higher the value, the more aggressive (meaning faster) the valve responds. If the pump surges around the target rate, lower this value. If the pump is too slow to reach the target rate, increase this value.

Overshoot Reduction

Overshoot Reduction: Affects how quickly the PWM valve moves in response due to speed, rate, or section changes. The higher the value, the more aggressive (meaning faster) the valve responds. If the pump surges around the target rate, lower this value. If the pump is too slow to reach the target rate, increase this value.

Deadband

Deadband: The range around the target rate where the valve stops adjusting rate until the change in flow exceeds the entered limit.

Frequency

Frequency: The frequency of the control signal that is provided by the AgXcel pump.

Startup Duty Cycle

Startup Duty Cycle: The initial duty cycle that the AgXcel pump will start at.


Minimum Duty Cycle

Minimum Duty Cycle: The lowest duty cycle that the AgXcel pump is allowed to operate at.

Maximum Duty Cycle

Maximum Duty Cycle: The highest duty cycle that the AgXcel pump is allowed to operate at.

Setup and Configuration

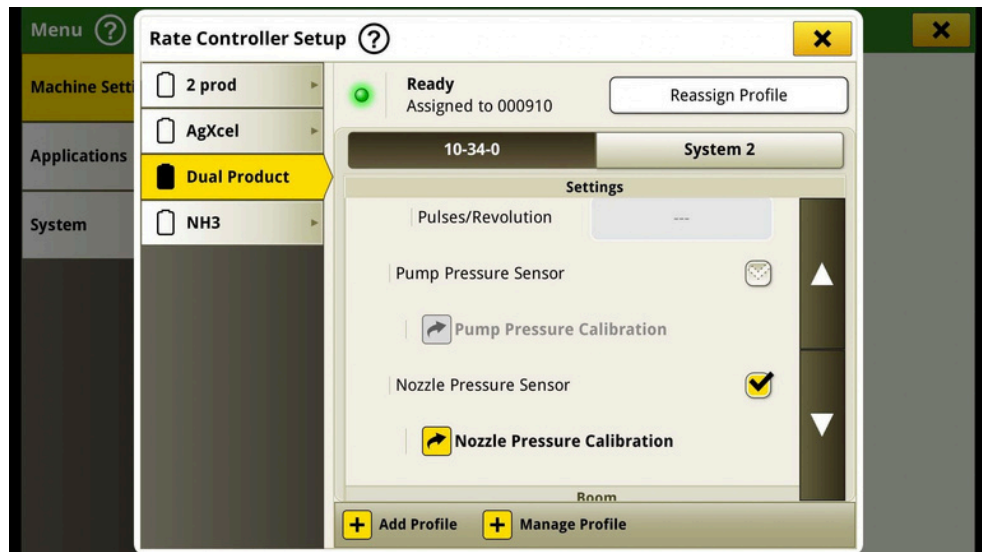

This is **Pressure 2** on AgXcel harnessing.

Nozzle Pressure Sensor:


Enable if you are using an AgXcel Pressure Transducer. Once enabled, select the Nozzle Pressure Calibration.

For AgXcel Pressure Transducers, enter the following settings:


Active Voltage: 5000mV

Offset Voltage: 100mV

Active Pressure: 100PSI

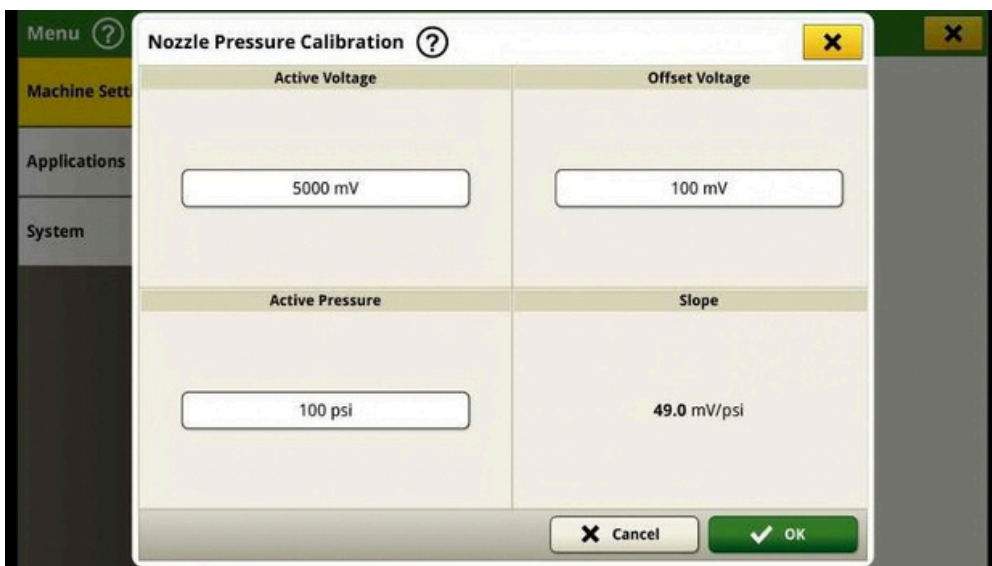

Setup and Configuration

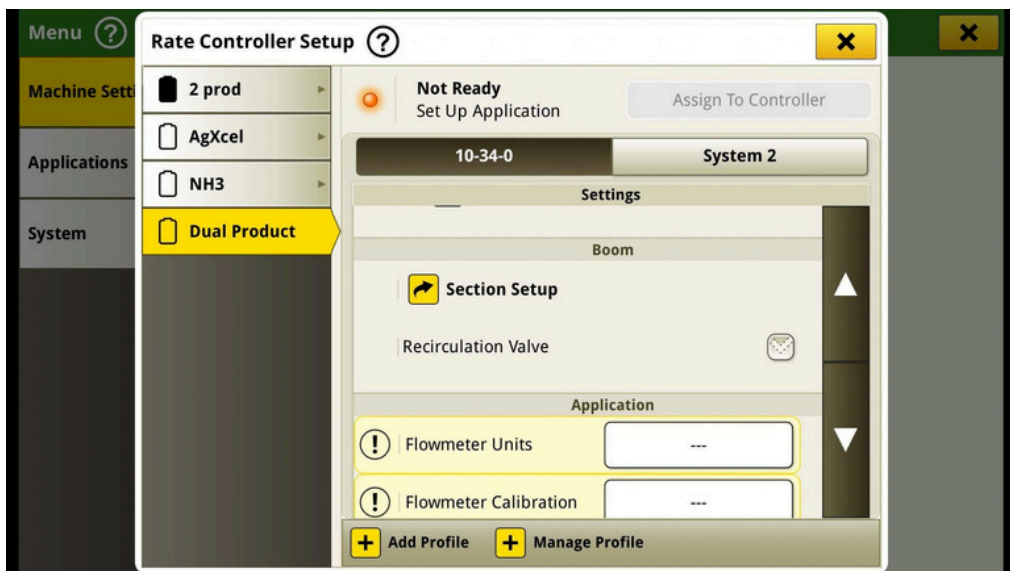

Setup Sections:

Select this to set the number of sections and rows per section for the selected liquid product.

Recirculation Valve:

Select this if a recirculation valve is in use.

Number of Sections:

Set the number of sections for the currently selected pump system. If you do not have any sections valves, enter 1 section.

Implement Width:


Enter the width of your implement in feet.

Width:


This gives you the ability to set Custom Widths or Equal Widths. Select Custom Widths if you do not have an even number of rows between all sections. Select Equal Width if you have the same amount of rows for every section.

Section Width:

If you selected Custom Widths, enter the width of each section per width. If you selected Equal Widths, ensure the displayed width is correct.

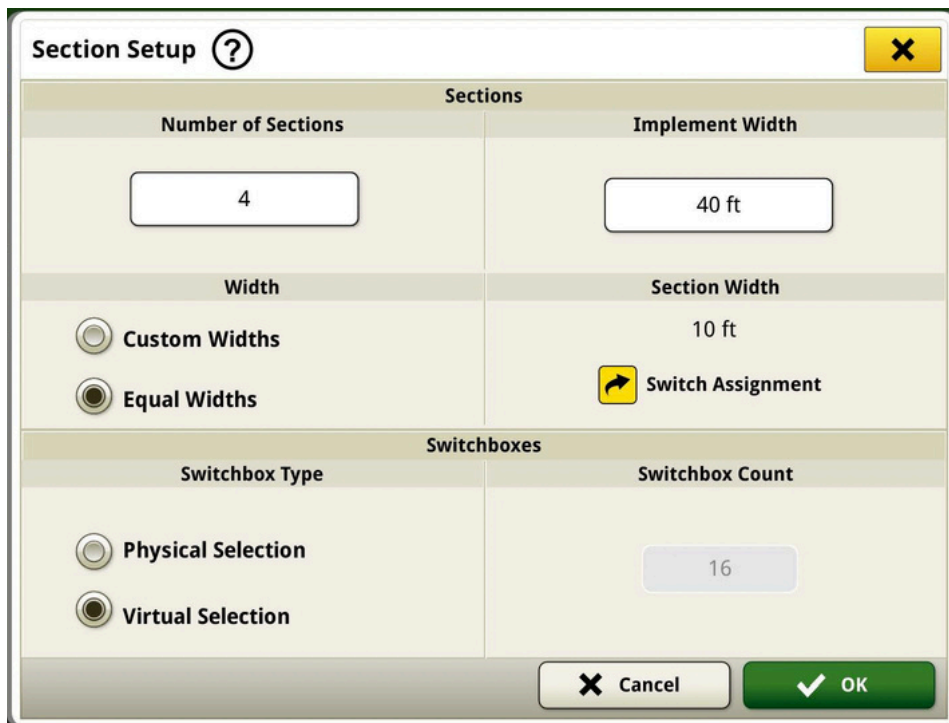

Settings

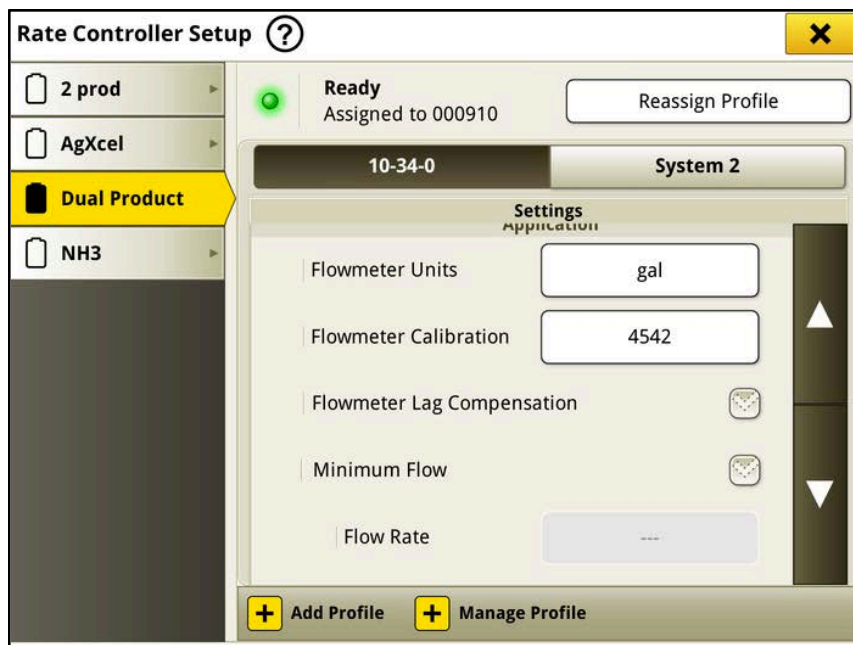

Flowmeter Units: Set to gal for AgXcel magnetic flowmeters. Or set to 10 gal for Raven turbine flowmeters.

Flowmeter Calibration: See the chart below for AgXcel Magnetic Flowmeters or refer to the tag on the flowmeter for your calibration number.

Flowmeter Lag Compensation: Check this to record your target rate as the actual rate for three seconds, or until the flowmeter start to read flow.

Minimum Flow Rate: Leave this option not checked. AgXcel recommends a minimum flow rate of 0.

Flow Rate: Leave this option at 0.



Orion 2+ Magnetic Flowmeter Models

FLOW RANGE (GPM)	PULSES PER GALLON	JOHN DEERE GS2/GS3 2K LRCM	
		DB8 CABLE	CAL#
0.053 - 5.3	11355	YES	2838
.53 - 53	1135	NO	1135
2.11 - 211	284		284

Orion 3 Magnetic Flowmeter Models

FLOW RANGE (GPM)	PULSES PER GALLON	JOHN DEERE GS2/GS3 2K LRCM	
		DB8 CABLE	CAL#
.04 - 1.6 (DN3)	75708	YES	9464
.08 - 3.17 (DN4)	37854		4731
.26 - 10.5 (DN7)	11356		1419
.52 - 21 (DN10)	4542	NO	4542
1.45 - 58 (DN)	2063		2063



Setup and Configuration

The 'Rate Controller Setup' window displays the configuration for the 'Dual Product'. The left sidebar shows a list of products: '2 prod', 'AgXcel', 'Dual Product' (selected), and 'NH3'. The main area shows the 'Ready' status and 'Assigned to 000910'. Under 'Settings', 'Rate Smoothing' is checked, and 'Rate Tolerance' is set to 10%. Under 'Tank', 'Tank Capacity' is set to 500 gal, and 'Agitation Valve' is set to 'Off'. At the bottom are buttons for '+ Add Profile' and '+ Manage Profile'.

Rate Smoothing: Enabled

Rate Tolerance: Set at 10%

Tank Capacity: Set to your tank(s) capacity

Agitation Valve: Enable if agitation valve is installed.

Duty Cycle: Set to your desired run time.

Alarms

Select Alarms to enable certain alarms and set thresholds.

Target Rate: If you choose to enable this, AgXcel recommends setting the Low & High limits at 20%.

Nozzle Pressure: If you choose to enable this, AgXcel recommends setting the Low to 10 PSI for GX2 or 20 PSI for GX5. Then the High for GX2 at 30 PSI or 60 PSI for GX5.


This view of the 'Rate Controller Setup' window shows the 'Tank' and 'Alarms' sections. 'Tank Capacity' is 500 gal, 'Agitation Valve' is 'Off', and 'Duty Cycle' is set to 20%. The 'Alarms' section at the bottom has a checkmark next to the 'Alarms' label. '+ Add Profile' and '+ Manage Profile' buttons are at the bottom.

The 'Alarms' configuration window shows settings for 'Target Rate' (checked), 'Low' (20%), 'High' (20%), 'Pump Pressure' (unchecked), 'Minimum' (0 psi), 'Maximum' (0 psi), 'Nozzle Pressure' (checked), and 'Minimum' (10 psi). 'Cancel' and 'OK' buttons are at the bottom.



This view of the 'Alarms' configuration window shows 'Nozzle Pressure' (checked) with 'Minimum' (10 psi) and 'Maximum' (30 psi) settings. 'Pump Speed' is unchecked, with 'Minimum' (0 RPM) and 'Maximum' (0 RPM) settings. 'Cancel' and 'OK' buttons are at the bottom.

Setup and Configuration

Once you have entered in all of the settings for your first pump system, select the System 2 option and enter the settings as needed for your second pump system.

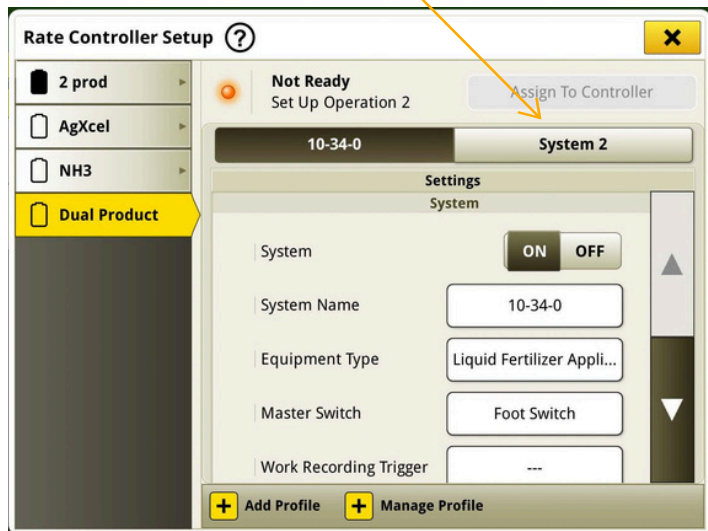

Once you have entered all of the required settings, scroll back to the top and press the **Assign To Controller** option.

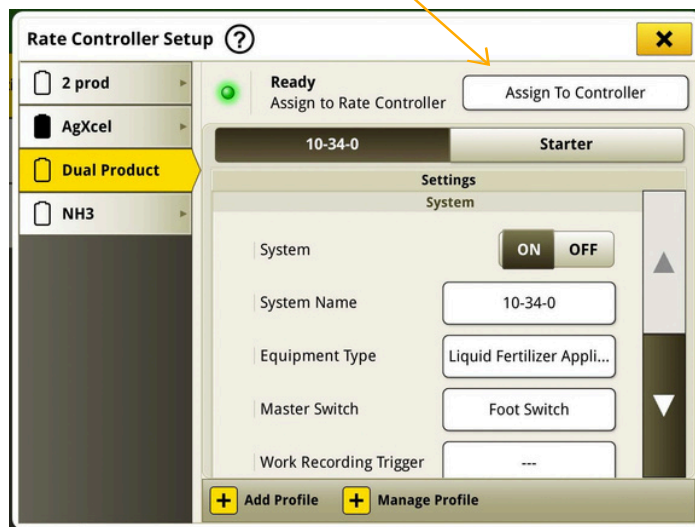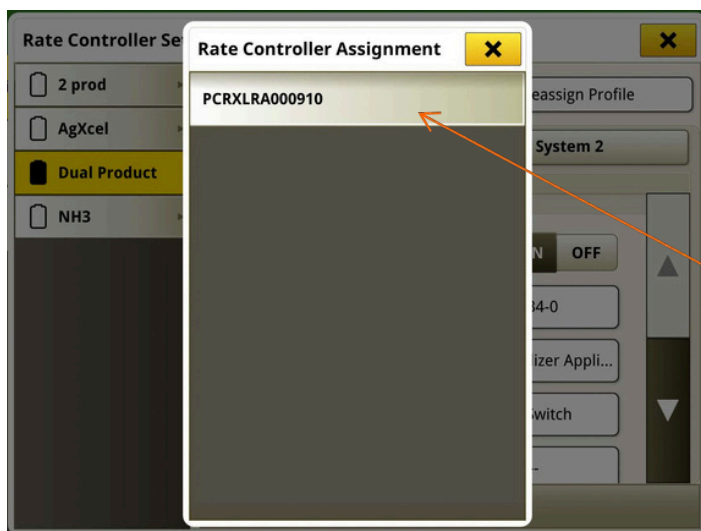

Then you will need to select which Rate Controller 3 you want to assign the product to (the option(s) displayed are the serial numbers of the Rate Controller 3 units).

Setup and Configuration

Rate Controller Calibration | Pressure Sensor

Calibration Process

This process calibrates the pressure sensor.

Calibration may be needed if:

- Pressure sensor reading does not return to zero when system is open to atmosphere
- The pressure sensor has been replaced

Note: This requires exposing the system to atmosphere by opening the pump and Quick-Fill valves and removing the boom strainer. Ensure the tank is empty and boom plumbing is drained.

Details

00-00-0000 00:00 PM
Last Calibration
As Needed
Recommended Interval
Varies
Estimated Time Required

Select System: 10-34-0
Pressure Sensor: Nozzle
Test Type: Voltage Based

CAL Begin Calibration

Step 1. Select the pressure transducer that you want to calibrate under Select System, then Pressure Sensor, & Test Type will be set to Voltage Based Calibration.

Rate Controller Calibration | Pressure Sensor

CAL

Step 2: Input Slope

Input new slope value.

50

Readings

Pressure	-2.0 psi
Slope	50.0 mV/psi
Voltage Offset	100 mV

Cancel Step 2 of 3 **Next >>**

Step 2. Enter the slope as 50.

Step 3. Confirm that there is no pressure in the system.

Then press **Save** to save results.

Rate Controller Calibration | Pressure Sensor

CAL

Step 3: Ensure Zero Pressure

Ensure there is zero pressure for sensor to be calibrated.

Readings

Pressure	-2.0 psi
Slope	50.0 mV/psi
Voltage Offset	100 mV

Cancel Step 3 of 3 **Next >>**

Rate Controller Calibration | Pressure Sensor

Calibration Complete

The Pressure Sensor Calibration was successful.


Select "Save" to apply results, or "Repeat Calibration" to save results and repeat calibration, or "Cancel" to discard.

Readings

Pressure	0.0 psi
Slope	50.0 mV/psi
Voltage Offset	0 mV



Cancel **Repeat Calibration** **Save**

Setup and Configuration

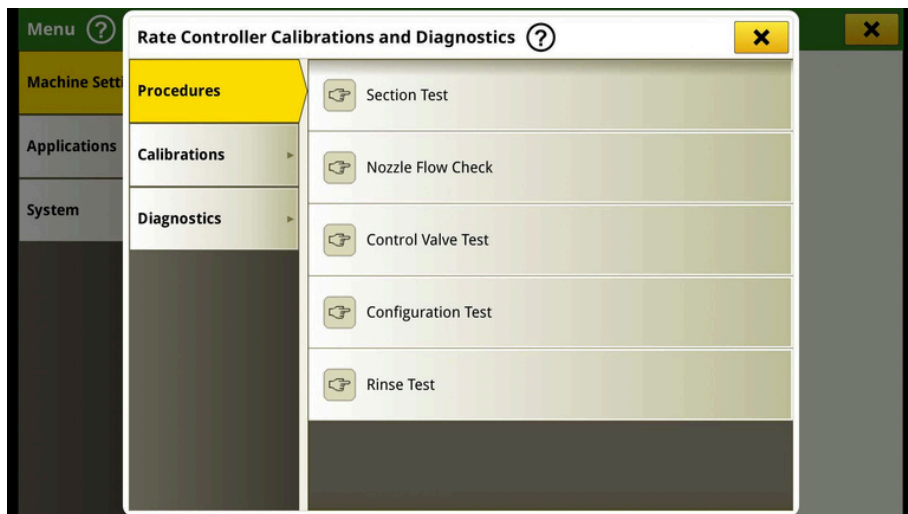

Step 1: Select the pressure transducer that you want to calibrate under Select System, then Pressure Sensor, and Test Type will be set to Voltage Based Calibration.

Under Select System, **Select the product** that you want to do the wet test with. Then press **Begin Procedure**.

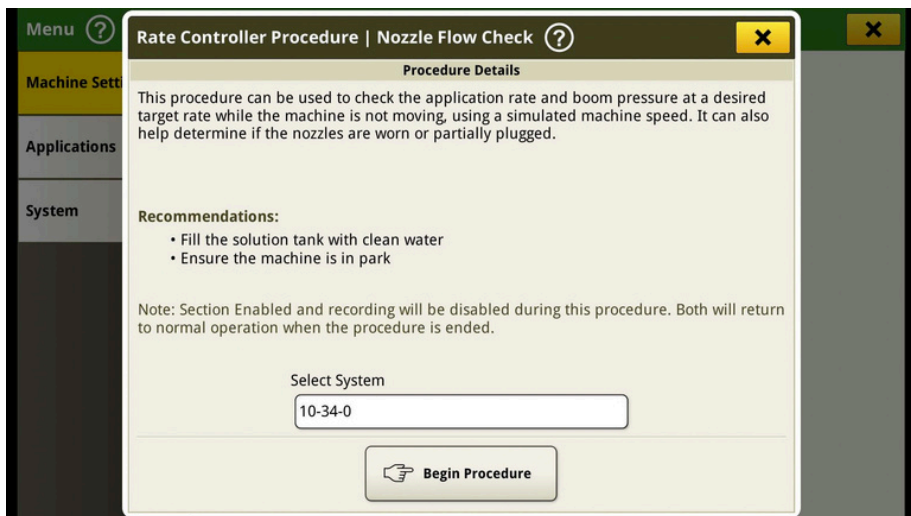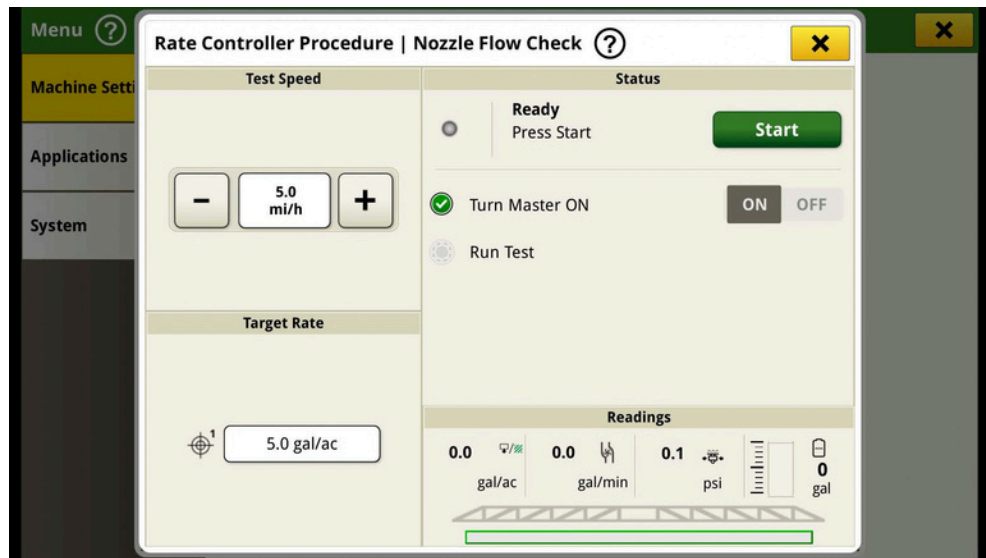

From here, enter your **Target Speed, Target Rate**, turn your **Master Switch ON**, & press **Start** to begin the nozzle flow check. On the bottom of the page under Readings, you can see what your actual GPA rate, actual GPM rate, & Pressure. Ensure the screen is saying that the correct rate is being applied. Once confirmed, do a catch test at a few rows to ensure you are catching the correct flow rate.




Agxcel #53605

48-PIN CONTROLLER HARNESS



SECTION 01	01
SECTION 02	02
SECTION 03	03
SECTION 04	04
SECTION 05	05
SECTION 06	06
SECTION 07	07
SECTION 08	08
SECTION 09	09
SECTION 10	10
SECTION 11	11
SECTION 12	12
FLOW METER SIGNAL 1	13
FLOW METER SIGNAL 2	14
SYSTEM 1 PUMP SPEED	15
HIGH_POWER 1	16
HIGH_POWER 2	17
SYSTEM 2 PUMP SPEED	18
	19
	20
	21
SYSTEM 1 PWM +	22
SYSTEM 1 PWM -	23
NH3 BOOST PUMP +	24
NH3 BOOST PUMP -	25
SYSTEM 2 PWM +	26
SYSTEM 2 PWM -	27
	28
	29
	30
IMPLEMENT SWITCH 5V	31
	32
HEIGHT SIGNAL	33
VALVE GROUND 1	34
HIGH CURRENT GND	35
	36
	37
	38
SECTION 13	39
SECTION 14	40
SECTION 15	41
SECTION 16	42
PRESSURE SIGNAL 1	43
PRESSURE SIGNAL 2	44
SYSTEM PRESSURE SIG 1	45
SYSTEM PRESSURE SIG 2	46
	47
	48

Wire Size: 18 G
Length: 2 ft
Created 10-29-26

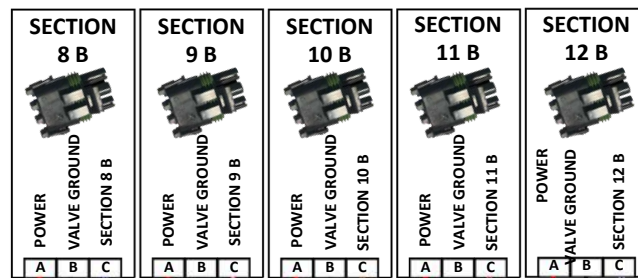

SECTIONS 2



01	VALVE GROUND
02	SECTION 10
03	SECTION 11
04	SECTION 12
05	SECTION 13
06	SECTION 14
07	SECTION 15
08	SECTION 16
12	PRESSURE 2
14	POWER (ODDS)
15	SECTION 9
16	POWER (EVENS)

PRODUCT 2



01	GROUND2
03	SYSTEM 2 PWM -
04	SYSTEM 2 PWM +
08	SYSTEM PRESSURE SIG 2
09	PRESSURE 2
11	HIGH CURRENT GROUND
12	SYSTEM 2 PUMP SPEED
13	FLOWMETER SIGNAL 2
14	SYSTEM 2 AGITATOR
15	SYSTEM 2 RECIRC
16	POWER

SECTIONS 1



01	VALVE GROUND
02	SECTION 2
03	SECTION 3
04	SECTION 4
05	SECTION 5
06	SECTION 6
07	SECTION 7
08	SECTION 8
13	PRESSURE 1
14	POWER (ODDS)
15	SECTION 1
16	POWER (EVENS)

PRODUCT 1



01	GROUND2
02	NH3 BOOST PUMP +
03	SYSTEM 1 PWM -
04	SYSTEM 1 PWM +
05	NH3 BOOST PUMP -
06	SECTION 1
08	SYSTEM PRESSURE SIG 1
09	PRESSURE 1
11	HIGH CURRENT GND
12	SYSTEM 1 PUMP SPEED
13	FLOWMETER SIGNAL 1
14	SYSTEM 1 AGITATOR
15	SYSTEM 1 RECIRC
16	POWER

TROUBLESHOOTING

Why am I Over-Applying?

- Ensure that your PWM Low Limit setting is lower than the current Duty Cycle. This setting can be found under Field IQ > Calibrate > Drive Calibration. If your PWM Low Limit is set too high, then the liquid controller will not allow the pump to apply at a lower Duty Cycle than the set low limit.
- Ensure that your Minimum Flow Rate is set to 0. This setting can be found under Field IQ > Setup > Rate Control Tab > Drive Setup.
- If you are using the GX5 Hydraulic Pump, ensure that the manual override valve is set in the close position. If the manual override is opened, then the GX5 pump will ignore the commands from your liquid controller and will only apply fluid based off of your hydraulic flow.

Why am I Under-Applying?

- Ensure that the pump system pressure is not too high, such as over 40 PSI. If your pump system pressure is too high, then you may have an obstruction in your pump or in your plumbing after the pump.
- Ensure that your disk orifice or microtube size is not too small. When the weather is colder, fertilizer can become more viscous, meaning that the pump is creating more pressure so the thicker liquid can be pushed through the same smaller size disk orifice or microtube.
- Ensure that your filter is not fully plugged or partially plugged.
- Ensure all ball valves from the tank to the pump are fully opened.
- Ensure you are not pulling in air from anywhere on the pump or before the pump. Ensure that all poly fittings have plumbers tape, all clamps are tight, all gaskets are in place, no poly fittings are cracked or damaged, all filter cups are screwed on tight and the oring is present and not damaged on the cup.
- If you are using a GX5 Hydraulic Pump, ensure you are providing enough hydraulic flow to the GX5 pump.
- Ensure that your PWM High Limit is set at 100. This setting can be found in your System Settings under Control Valve Setup. If your PWM High Limit is set too low, then the liquid controller will not allow the pump to apply at a higher Duty Cycle than the set high limit.
- If you are using the GX5 Hydraulic Pump, ensure that the manual override valve is set in the close position. If the manual override is opened, then the GX5 pump will ignore the commands from your liquid controller and will only apply fluid based off of your hydraulic flow.
- Ensure that your pressure is higher than at least 10 PSI (check valve size dependent). If you are using a 4LB check valve (blue top), then you will need a minimum of 10 PSI to open all of the check valve. If you are using a 10 PSI check valve (black top), then you will need a minimum of 20 PSI to open all of the check valves. Not creating enough pressure can cause uneven flow to each row and also potentially cause your pump system under apply.

TROUBLESHOOTING

Why is my flow rate surging?

- Ensure that the Threshold set at 10%. This can be found under Configuration Setup > Controller Settings > Rate Error Alarm.
- Lower the PWM Gain. This setting can be found in Configuration Setup > Controller Settings > Control Valve Settings. The higher this value is, the more aggressive the pump system will be. The more aggressive the pump system is, the more the pump can surge, but having a higher valve response rate also means that the pump is able to respond faster to changes in your flow rate. But if the PWM Gain is too low, then the pump can become too slow and take too long to reach your target rate.
- Ensure that your pressure is higher than at least 10 PSI (check valve size dependent). If you are using a 4LB check valve (blue top), then you will need a minimum of 10 PSI to open all of the check valve. If you are using a 10 PSI check valve (black top), then you will need a minimum of 20 PSI to open all of the check valves. Not creating enough pressure can cause uneven flow to each row and also potentially cause your pump system under apply.

What should my system pressure be?

- AgXcel Pump Systems are not pressure based, especially when they are controlled with a Liquid Rate Controller. However, pressure can affect the performance of the pump system if the pressure is too low or too high. It is recommended to not apply under 10 PSI if you are applying fertilizer infurrow and not above 40 PSI. For a Nitrogen application, it is recommended not to apply below 20 PSI but no need to apply over 60 PSI.

Why is my controller tells me I am applying the correct amount, but I am actually applying more/ less at the rows?

- If your flowmeter calibration number is incorrect, your liquid controller can still tell you that you are applying the correct amount of fertilizer, even though you are actually applying an incorrect amount of fertilizer. Ensure that your flowmeter calibration number is the same as what was provided on your pump system manual. This number will be located on a sticker on the manual.
- If you have the correct flowmeter calibration number entered that was provided by AgXcel, then you will need to manually change the flow calibration number. You can either preform a Catch Test Calibration which can be found in your System Settings under Rate Sensor Setup, or you can manually adjust the flow calibration number yourself. If you raise the flowmeter calibration number, then you will apply more fertilizer. If you lower the flowmeter calibration number, then you will apply less fertilizer.
 - To quickly find what your flowmeter calibration number should be, take the amount of fluid you caught at the row and divide that by the amount of fluid that you should have caught at the row. So if you over applied by 20%, then you can reduce your flowmeter calibration number by 20%. Then do another catch test to ensure you are applying at the correct rate. Or if you under applied by 20%, then you can raise your flowmeter calibration number by 20% and do a catch test to ensure you are applying at the correct rate.



877-218-1981
www.agxcel.com

**2106 F Avenue
Kearney, NE 68847**