

Check Valve Mounting



Commonly, the single check valve will either be bolted to the row unit or zip tied to the toolbar just like shown above. The bottom of the check valve has a slot so you place the head of a 1/4" bolt in the slot. Make sure you do not tighten the nut too tight to prevent cracking the check valve.




Parallel Arm Mounting Bracket



AgXcel also offers a bracket to mount the check valves to the parallel arms on the row unit. There is a bracket that only holds one check valve and another that holds two check valves.



Dual Check Valve Parallel Arm Mounting Bracket

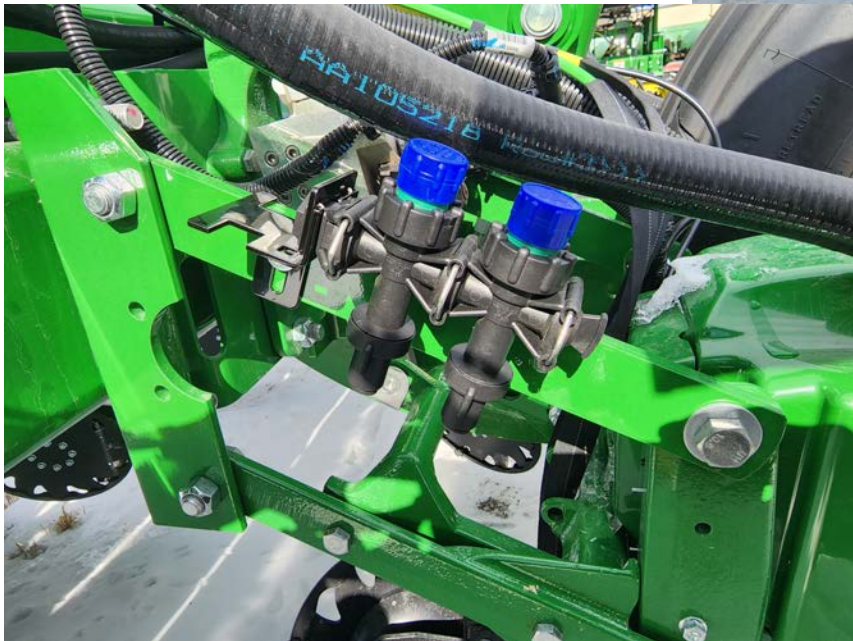



If you did not want to mount the dual check valves to the parallel arm, you can also use a bracket that will hold the dual check valves to the 7x7 toolbar.

